

Document 0013-0004  
 AeroLEDs LLC  
 8475 W Elisa Street  
 Boise, ID 83709  
 Phone: (208) 850-3294  
[www.aeroleds.com](http://www.aeroleds.com)  
[sales@aeroleds.com](mailto:sales@aeroleds.com)

**Installation Guide:**  
**Sunbeam**  
**P/N 90-1000**  
**LED Landing light with**  
**built-in pulse recognition mode**



**Operating Instructions:**

**Operational Voltage: 14 & 28 Volt Systems**  
**Input Current: 1.1A at 14V, 0.55A at 28V**

**EQUIPMENT LIMITATIONS:**

Mount to bezel mounting plate with circuit breaker or fuse appropriate for rated current. The procedures contained herein are not intended to conflict with the procedures set forth by aircraft and engine manufacturers, nor do they supersede the FAA approved manuals and FAA regulations. If necessary, consult AC 43.13-1B for guidance on acceptable methods, techniques, and practices.

**CONTINUED AIRWORTHINESS:**

The Sunbeam LED landing light assembly is designed with 2 high power LEDs mounted behind a lens. Should any one LED fail, the unit must be replaced.

Interval	Description	Notes
50 hr.	<ul style="list-style-type: none"> <li>Perform function check on landing light(s)</li> </ul>	Landing lights are not field repairable and should be sent to manufacturer for repair/replacement if defective
100 hr.	<ul style="list-style-type: none"> <li>Perform function check on landing</li> </ul>	Landing lights are not field repairable and should be sent to manufacturer for

	light(s) / replace unit if defective <ul style="list-style-type: none"> <li>Inspect for discoloration of lens</li> <li>Inspect mounting for security</li> <li>Inspect all connectors for good engagement</li> <li>Inspect wiring for chaffing / defects</li> </ul>	repair/replacement if defective
Annually	<ul style="list-style-type: none"> <li>Perform function check on landing light(s) / replace unit if defective</li> <li>Inspect for discoloration of lens</li> <li>Inspect mounting for security</li> <li>Inspect all connectors for</li> </ul>	Landing lights are not field repairable and should be sent to manufacturer for repair/replacement if defective

	<p>good engagement</p> <ul style="list-style-type: none"> <li>Inspect wiring for chaffing / defects</li> </ul>	
--	--	--


- Mount a suitable mounting plate with appropriate cutout and mounting holes for bezel mounting the light in the desired location and aimed in the desired direction.
- Install an appropriate aircraft approved switch and circuit breaker of correct rating for the lights installed for the pulse function. Original landing light switch/switches may be used, however, the circuit breakers are to be replaced with one(s) of appropriate rating for the lights installed.
- Placard switches appropriately.
- Power up aircraft and verify proper operation of Sunbeam LED light, in both pulsing and steady functions (as appropriate to the installation)
- Using the appropriate aircraft maintenance manual, verify that the light angle has not changed, and is oriented & aimed in accordance with manufacturer's instructions.
- Perform EMI test to verify there is no interference caused by light installation.
- Reinstall cowlings or lens covers as needed.
- Fill out and submit appropriate form 337 for work accomplished (unless installed under STC or installed in an experimental or LSA), and enter appropriate logbook entry detailing work.
- Determine weight & balance change, and update aircraft weight and balance data.

**INSTALLATION PROCEDURES:**

- The installation procedure described in the following text is for a single light installation, but the procedure is identical for multiple light installations. The pulsing function of the replacement landing light(s) is a self-contained feature, and does not require the use of an externally mounted pulse light controller.
- Remove cowlings and/or landing light lens to gain access to light assemblies.
- Route 3-conductor shielded wire (minimum 20 AWG) from switch location to LED landing light assemblies through wings and/or cowling, securing as needed using tie-wraps or equivalent means to secure wire bundles.
- Install suitable aircraft approved connectors to wires coming from landing light assemblies and wires routed from switch using wiring diagram shown on page 2.


**Figure 1**

**Wiring Diagram for single LED Sunbeam landing light**

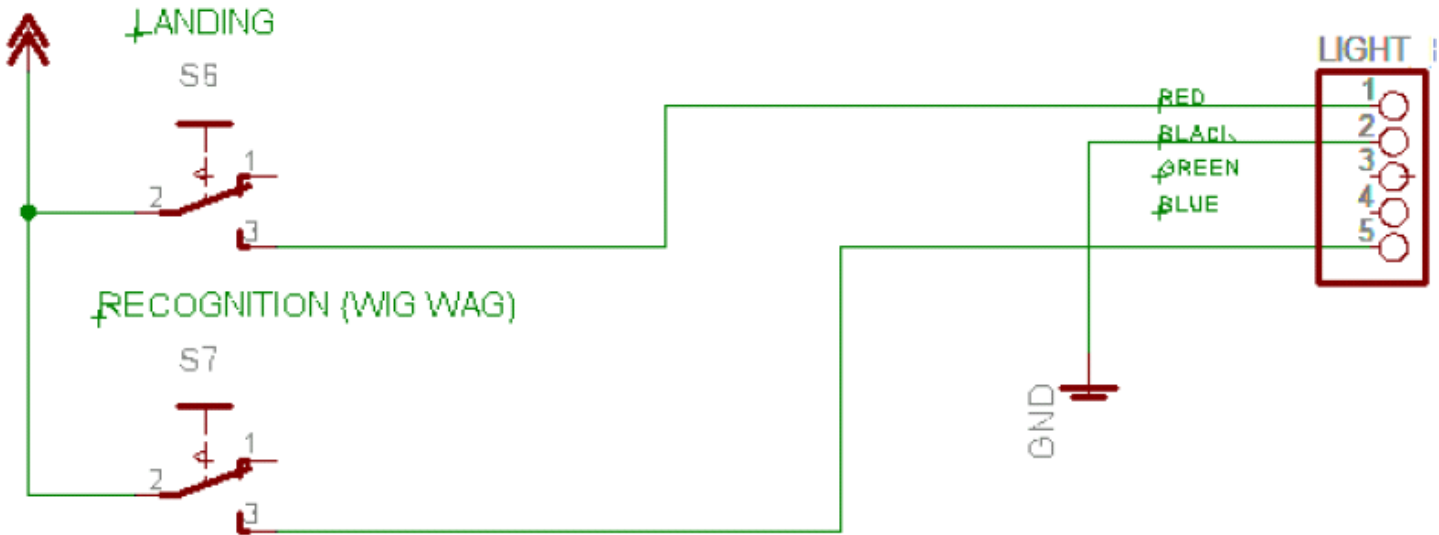


**Figure 2**



**Wiring Diagram for dual LED Sunbeam landing lights**

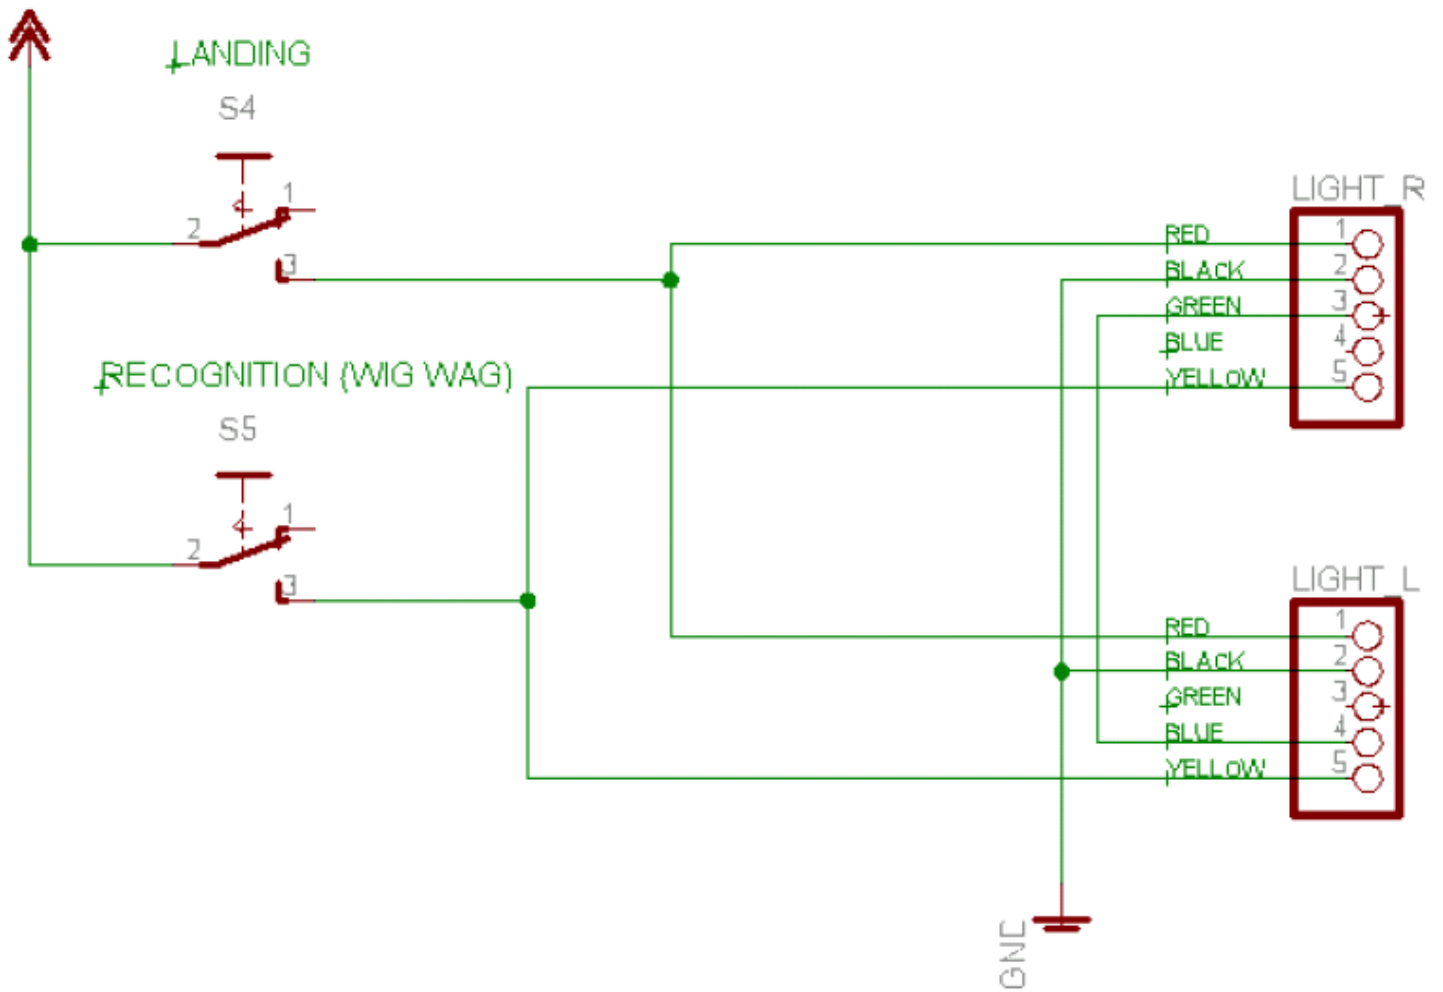

**Figure 3**

**Wiring Diagram for four LED Sunbeam landing light assemblies**

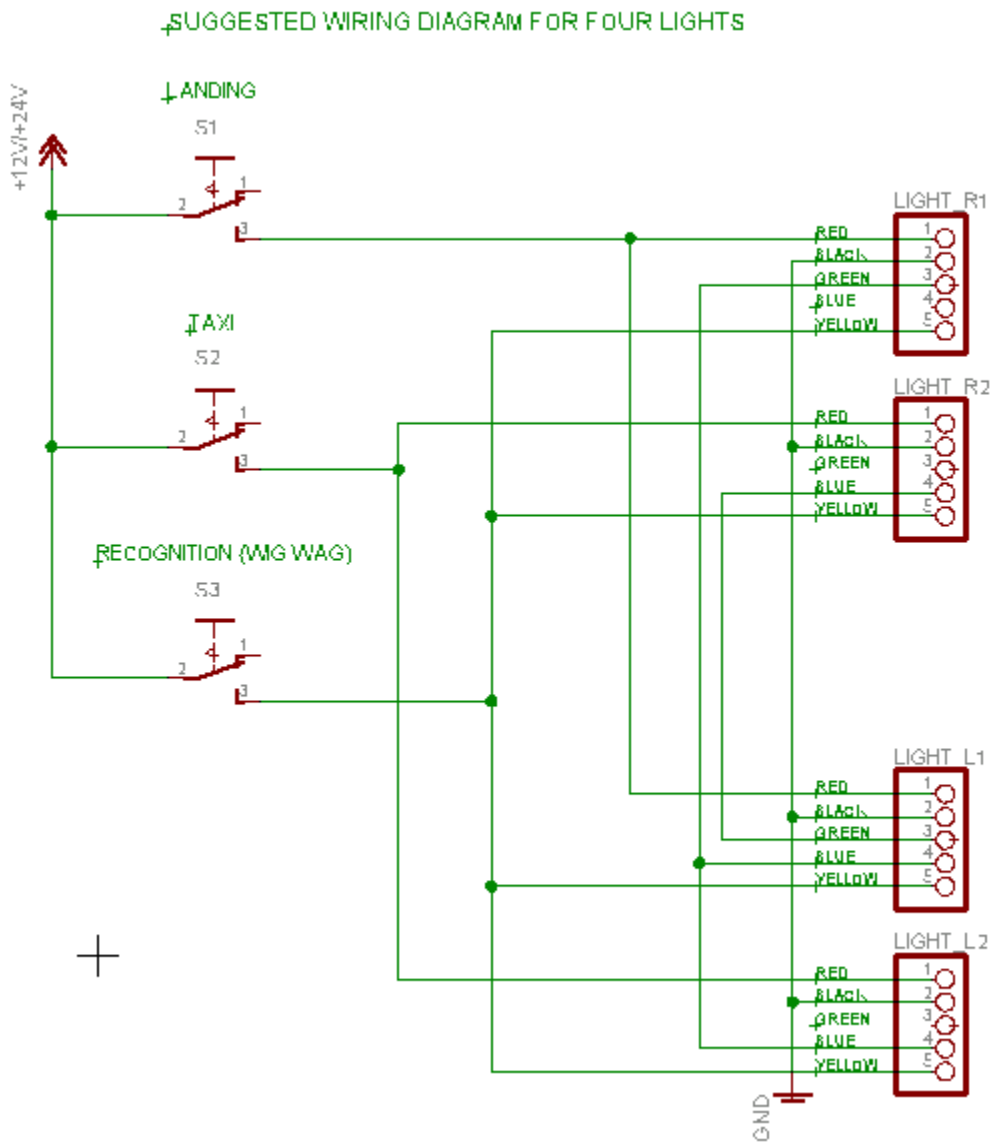

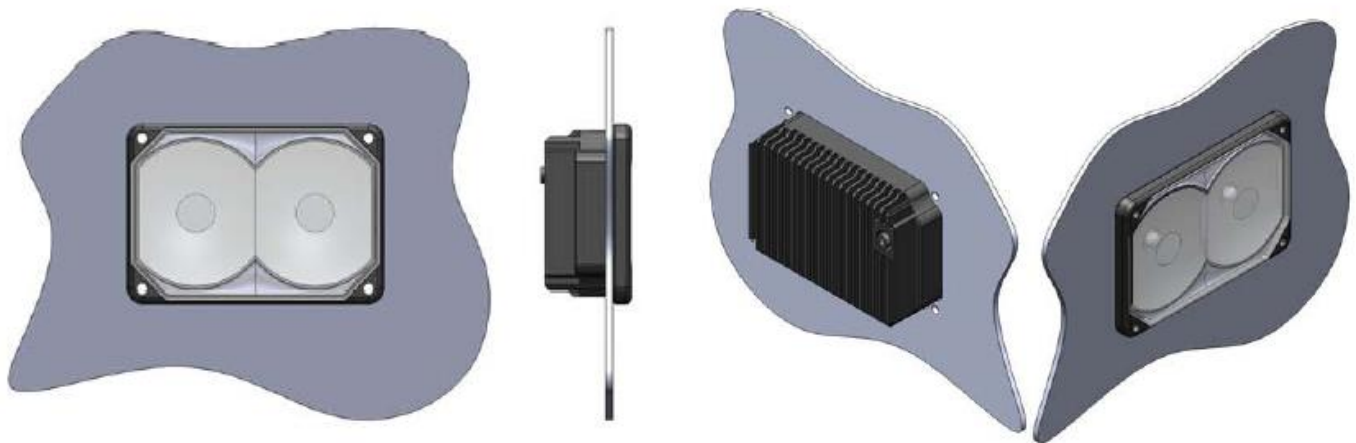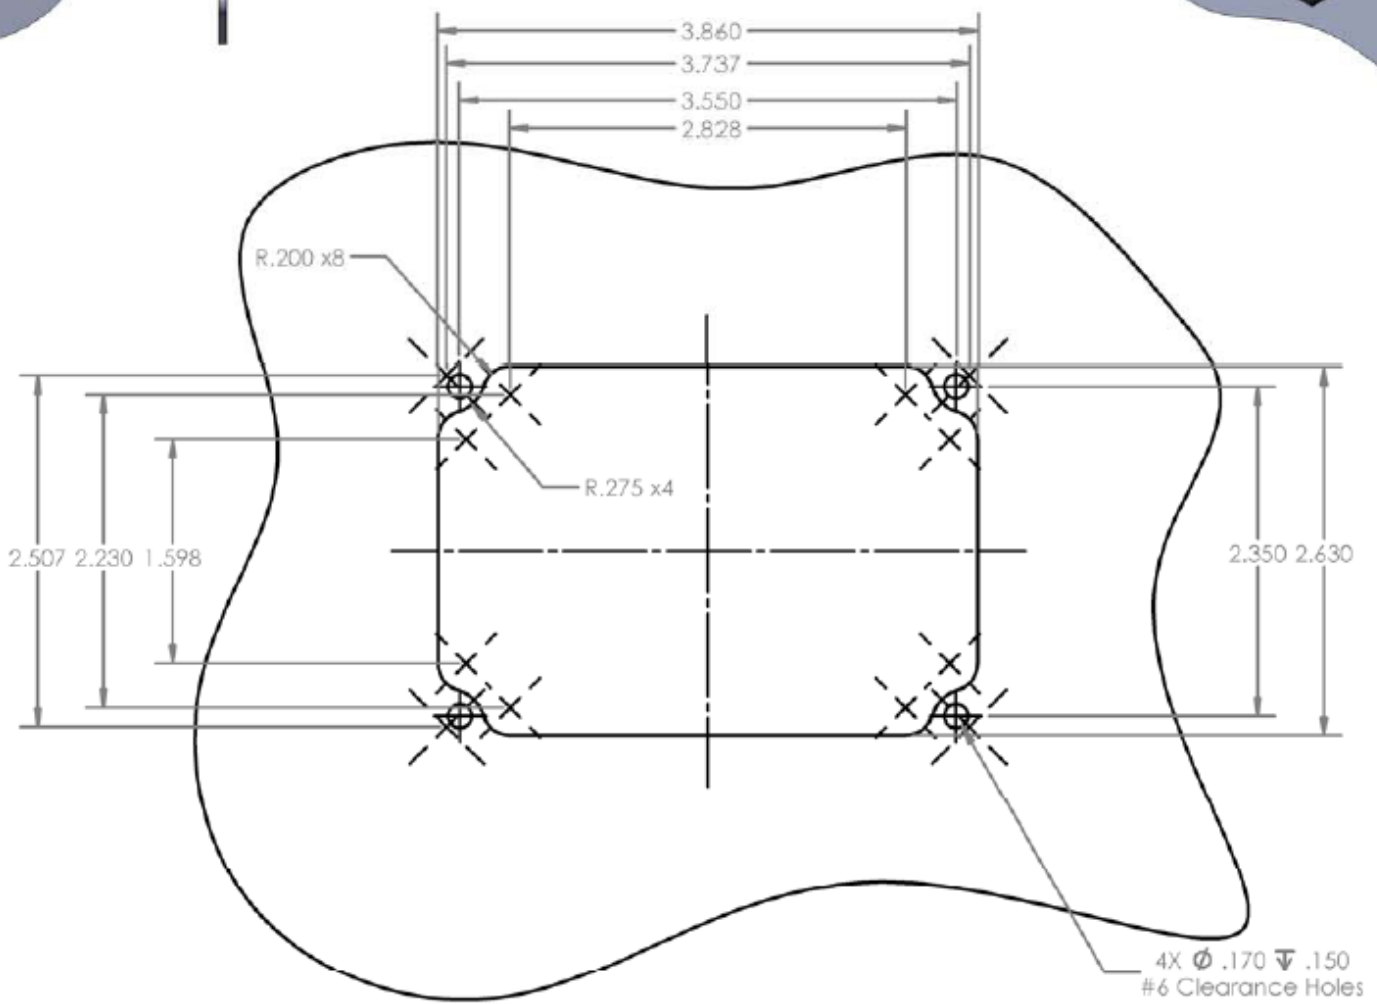

DO-160E Section	Compliance Level
4	F2
5	F2
6	C
8	U
9	H
10	S
11	F
12	D
13	F
14	S
15	A
16	Z
17	A
18	Z
19	ZC
20	RR
21	H
22	A2E2

***INSTALLATION INSTRUCTIONS REVISION RECORD SHEET***

Revision Number	Effective Date	Inserted By	Page Numbers Revised
IR	4/02/2012	Dean Wilkinson	All
A	10/07/2016	Dean Wilkinson	1